

Ozone Axial Fan Owner's Manual

Model: M-25 M-27

(220-240V~,50Hz)

Read and save these instructions www.xpower.com | www.tx-5.com.hk

Index: NA-1-A34 Edition: 1.0

Safety Instructions



A WARNING - READ AND SAVE THIS INSTRUCTIONS BEFORE USING THIS PRODUCT.

The user of electrical products may create hazards that include, but are not limited to injury, fire, electrical shock. Failure to follow these instructions may damage and/or impair its operation and void the warranty.


- Before operating, remove all packaging material and check for any damage that may have occurred during shipping or any missing items.
- Check household power supply to ensure it matches the appliance's specification.
- DO NOT operate any fan with a damaged cord or plug. Discard fan or return it to an authorized service facility for examination and/or repair.
- DO NOT run cord under carpeting. DO NOT cover cord with throw rugs, runners, or similar coverings. **DO NOT** route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
- **DO NOT** touch this appliance or the plug with wet hands or while standing in water.
- **DO NOT** operate the appliance in any pooled water.
- DO NOT use the product in areas where gasoline, paint or other flammable goods and objects are used or stored.
- DO NOT insert or allow objects to enter any ventilation or exhaust opening as this may damage the appliance and void the warranty.
- **DO NOT** cover the air inlet or outlet on the appliance.
- DO NOT direct the air flow at human faces or bodies.
- **DO NOT** allow children to play with this appliance.
- AUTOMATICALLY OPERATED DEVICE To reduce the risk of injury, disconnect from power supply before servicing.
- Remove the power cord from the power cord strap and pulling on the power cord plug-end only, **DO NOT** pull the cord directly.
- DO NOT attempt to repair or adjust any electrical or mechanical functions of this appliance, as this may cause danger and void the warranty.
- If the appliance is damaged or it malfunctions, **DO NOT** continue to use it. Unplug the product from the electrical outlet. Refer to troubleshooting guide or contact XPOWER.
- · Store in a dry area, away from exposure to sunlight, extreme temperature and humidity, or other extreme environments, when not in use.
- SPECIFIC SAFETY WARNINGS OF THE OPERATION OF OZONE FUNCTION.
- **DO NOT** use the ozone function of this product in the space where people, ptes and plants are present.
- DO NOT use the product in areas where gasoline, paint or other flammable goods andobjects are used or stored. Use in a dry area, away from exposure to sunlight, extreme temperature and humidity, or other extreme environments, when not in use. Operated the device in a sealed room. Make sure to seal off all openings of the room.

- Once the ozone function has been started as well as during the cleaning process there
 must be neither people nor animals in the room to be cleaned and remove any plants.
 Leave the room immediately once turn on the ozone switch.
- Clearly indicate a room's ozone treatment for others and make sure that the room concerned cannot be accessed. Suitable warning signs should be attached at the entrance.
- **DO NOT** enter the treated room until the ozone concentration has dropped below a value of 0.2 mg/m³. (30 minutes after the ozone cleaning process has been completed.).
- **DO NOT** stack more than six units of this appliance.
- An electronic instruction manual can be obtained through manufacturer's website www.xpowermfr.com

Items Included



Parts Description

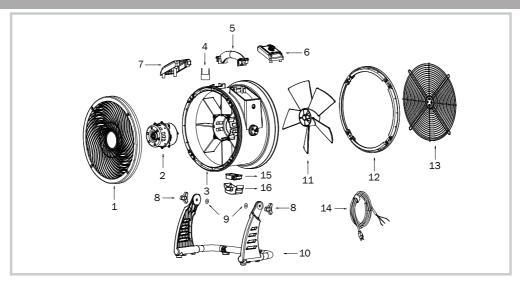

Parts Description (Continued)

- (1) Front Grille Cover
- (2) Motor
- (3) Housing
- (4) Capacitor
- (5) Housing Handle
- (6) Switch Plate
- (7) Timer Plate
- (8) Rack Handle
- (9) Rubber Washer
- (10) Rack

- (11) Fan
- (12) Rear End Cover
- (13) Rear Grille Cover
- (14) Power Cord
- (15) Ozone Generator
- (16) Power Box


Ozone Axial Fan Introduction

- XPOWER Ozone Axial Fan uses high voltage current to generate ozone from the oxygen in the air. It is designed for air sterilization, disinfection and purification. The oxidising agent ozone breaks down the existing odour molecule.e.g. cooking smells or musty odours as well as the smells left behind by cigarette smoke or a fire. The unit also has auxiliary functions of ventilation and drying.
- It is suitable for air purification and disinfection in various commercial places, as well as various professional killing applications.



Operation Guide

Switch Plate

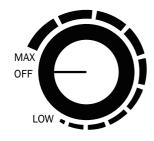


Variable Speed Switch

Variable Speed Switch

- Turn to "OFF" position to switch the machine OFF. Turn clock-wisely to any position between "MAX" and "LOW" to switch the machine ON.
- You can adjust to any desired speed variably.
 "MAX" is the higest speed and "LOW" is the lowest speed.

Switch Plate (Continued)

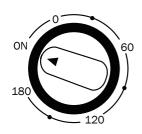

Timer Switch

Timer Switch

- Turn clockwise to set timer for minutes count down to an automatic stop.
- The timer can be set for up to 180 minutes (3 hours).
- When the timer reaches "0" position, the unit stops working. On "ON" position, it will stay connected with power.



Ozone Switch


Ozone Switch

- When the switch reaches "O" position, the ozone function stays off.
- When the switch reaches "I" position, the ozone function will connect with power supply. If the fan is functioning, then the ozone function will start; If the fan is off, or the timer switch reaches "0" position, then the ozone function will stop.
- On "ON" position, it will stay connected with power.




Ozone Indicator

• When this light is blinking, it indicates that the ozone function is working.

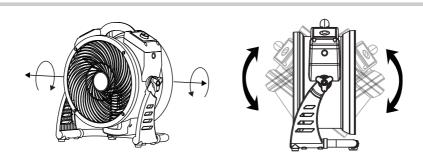

• The product features 360° rotation. Tilt the product to desired angle and screw on rack handles to secure the fan's position.

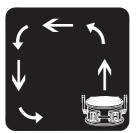





User Maintenance Instructions


It is recommended to maintain this product regularly. Failure to follow maintenance guidelines may result in product failure and void the warranty. Before maintaining the machine, be sure to disconnect the machine from the power source.

Clean the surface

- Wipe the surface of the housing with a damp cloth. Do not rinse the product directly with water.
- Remove blockages from the air inlet and air outlet.

Storage

- When idle, please put this product into the matching plastic bag and put it in the packing box. Avoid damage to the ozone generator of this product by dust and humidity.
- Store this product in a dry and cool room, avoid direct sunlight and chemicals, and keep out of reach of children.

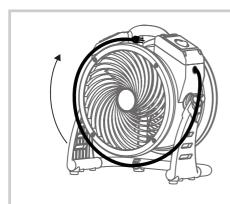

Organize the Power Cord

• Wrap the power cord around the housing.

Troubleshooting Guide

PROBLEM	POSSIBLE CAUSE	SOLUTION
Air Circulator does not start	No electricity.	Check for power supply.
	The power cord is not properly plugged in.	Remove and reconnect the power cord.
	The timer switch is set to "0" position.	Set the timer switch to "ON" position.
Unit runs but the speed is abnormal	Air inlet or air outlet is blocked.	Remove blockage.
Unit runs but no ozone come out	The ozone switch is off.	Open the ozone switch.
	The ozone generator is damaged.	Contact XPOWER or other parties authorized by XPOWER for further instructions.

Technical Specification

MODEL NUMBER	M-25	M-27
Voltage/ Frequency	220-240V~,50Hz	
Power	120 W	155 W
Speed Control	Variable Speeds	
Timer	3 hours (OFF)	
Ozone output	5 g/h	10 g/h
Cord Length	6.1 m	
Housing	ABS	
Unit Dimension (L) x (W) x (H)	39.1 x 22.4 x 43.7 cm	
Unit Weight	5.6 kg	

If your product(s) is not listed above, please visit www.xpowermfr.com for more information.

XPOWER LINITED WARRANTY

XPOWER warrants this product to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase.

The liability of XPOWER is limited solely to the cost of the repair or replacement of parts/the unit at XPOWER's discretion.

Important!

This warranty does not cover or apply to defects due directly or indirectly to misuse, abuse, disassembly, alteration, corrosive chemicals, improper voltage, fire, flood, negligence, accident, improperly or incorrectly performed maintenance or repair, or failure to perform necessary maintenance or repair, or if the use of this product is not in compliance with the instructions and specifications for its use.

The POWER CORD is not covered by the warranty.

Service

Contact an XPOWER Distributor in your region for warranty service and parts replacement.







XPOWER Manufacture, INC.

668 S. 6th Ave., City of Industry, CA 91746 USA

Read and save these instructions www.xpower.com | www.tx-5.com.hk

Index: NA-1-A34 Edition: 1.0